


SHINY TOOF JR. QUICK GUIDE

Thank you for your purchase! Here are a few things you should know.

Battery Swap

Tools required: 2mm hex wrench, maybe a small flathead screwdriver or knife.

1. The CR2032 battery is located under the panel with the snake on it.
2. Remove three screws: (1) M3x10 button head from the snake panel, and (2) M3x12 flatheads from the associated cover.
3. Remove the snake panel to access the battery. You may need a flathead screwdriver to pry the battery out.

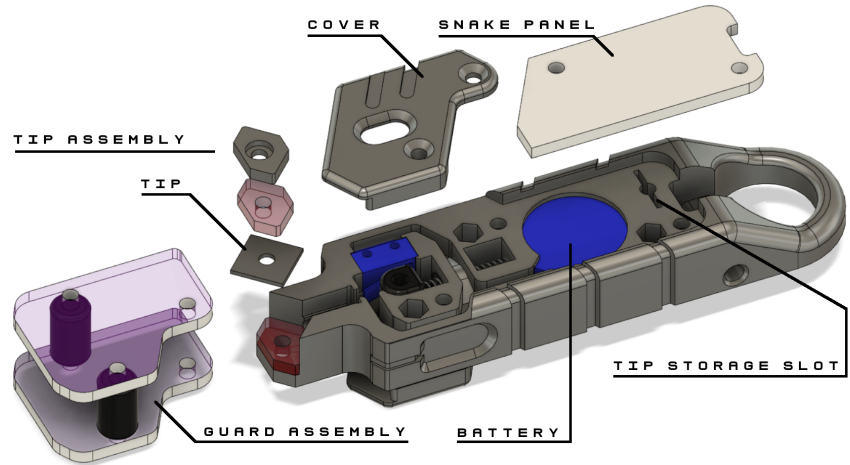

Defanging (tip removal / storage)

1. Follow steps above to access the tip storage slot next to the battery.
2. Remove (2) M3x6 button head screws from the guard assembly - the screws closest to the spring, one on each side.
3. Remove the guard assembly (the four screws near the front can be left installed).
4. Remove (1) M3x12 button head screw from the tip assembly.
5. Remove the tip from the tip assembly and insert it in the storage slot next to the battery.
6. IMPORTANT: With the tip removed from the tip assembly, the 12mm screw is now too long to properly reassemble. Swap this screw with the 10mm button head screw removed from the snake panel, installing the 10mm in the tip assembly.
7. Re-install the tip assembly, guard assembly, panel, and cover.

To remove tip from storage slot, insert 2mm wrench into the hole beneath the slot.

I'm always working on new sci-fi gear! If you like this kind of stuff, follow @starside_armory on Instagram for updates. Thanks again for your support, I couldn't do this without you!

See you starside,