



# ChemMate Chip Energizer Quick Guide

Thank you for your purchase! Here are a few things you should know:

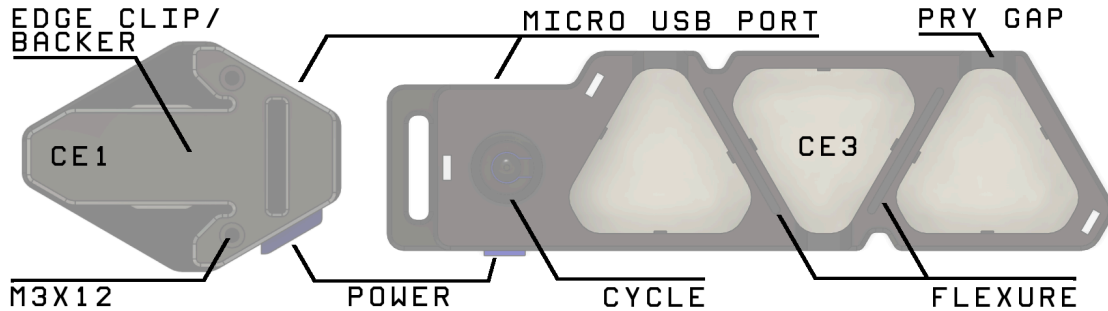

Wearing methods (2mm hex wrench may be required):

- Keychain (carabiner, hook+loop strap)
- Edge Clip (CE1): Slide edge clip over a thin edge such as a pocket, belt, or molle loop. Avoid thick edges which might hyperextend the edge clip.
- Surface Mount (CE1): Install by bolting through a thin material such as a jacket. Remove backer and keychain strap. Use backer as a template to make holes in material. From material back side, use backer as a washer and insert bolts through backer and material. Screw bolts into main CE1 body.
- Pendant (CE1): Remove backer and keychain strap. Thread lanyard through keychain slot:

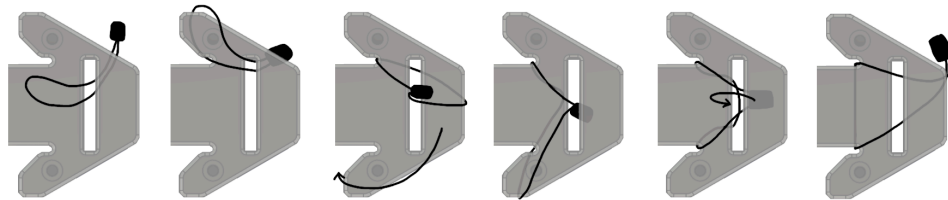

(See listing for video. There are ways to do it wrong. Last 2 steps should make sense irl)

Maintenance:

- Install a chip by placing a chip's long edge along a non-flexure edge of a socket, then pressing the opposite chip corner down. Pressing a chip into the compliant flexure edge is easier than the rigid non-flexure edges.
- Remove a chip by prying up on a chip corner at the pry gap. A flat, stiff tool may be required on CE3
- Battery type: Rechargeable Lithium Ion / Micro-USB (sorry, no USB-C module available)
- **Caution: Keep out of water and hot enclosed spaces (e.g., a car in the sun)**

I'm always working on new sci-fi gear! If you like this kind of stuff, check out [starsidearmory.com](http://starsidearmory.com) and [@starside\\_armory](https://www.instagram.com/starside_armory) on Instagram for updates. Thanks again for your support, I couldn't do this without you!

See you starside,