


MOONGRIP QUICK GUIDE

Thank you for your purchase! Here are a few things you should know.

Phone installation:

- Loosely assemble clamp pieces.
- Use a 2.5mm hex wrench to loosen the height adjustment screws. These come fully tightened in case you don't have one handy.
- Insert phone - it should touch both backstops if possible.
- Tighten outer clamp height as close against phone as possible.
- Repeat for inner clamp. Turn knob until phone is secure. **IT IS POSSIBLE TO OVER TIGHTEN KNOB!** It should be hard to turn the knob when it's tight, but don't overdo it.
- If the clamp is too large or small, there are alternate clamps. Take some measurements and contact me. **You can also return it within 30 days at no charge.**

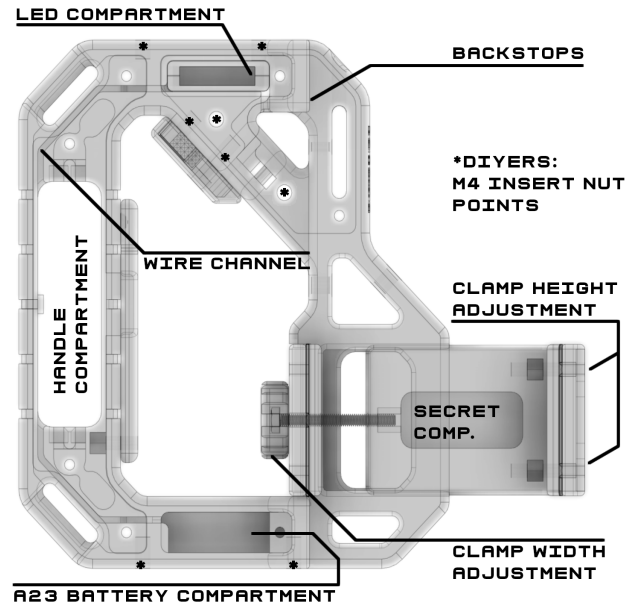

Battery swap (LED models):

- Use a 2mm hex wrench to remove the lower accent panel.
- Pry out the A23 battery from the left end.

Other:

- Depending on your phone size, the kickstand can be unstable in portrait mode. Lowering the phone in the clamp will help balance it out.
- Remove MoonGrip for use with dashboard mounts.
- Avoid excessive heat, such as leaving it in a vehicle in direct sunlight.
- Don't over tighten any screws.
- **Open the handle compartment by pulling up on the protruding tab. This can be stiff at first, but becomes easier with practice and wear-in.**

I'm always working on new sci-fi gear! If you like this kind of stuff, follow @starside_armory on Instagram for updates. Thanks again for your support, I couldn't do this without you!

See you starside,